

# DIY

## TRIMDEK®

# TRIMDEK INSTALLATION GUIDE

The logo for QEMCO, featuring the letters Q, E, M, C, and O in a stylized, outlined font. The 'Q' and 'O' have a unique shape with a diagonal line through them.

QLD EXPANDED METALS COMPANY

## WORKPLACE HEALTH & SAFETY

At all times and on all sites, Health & Safety must be the first priority.

Installation may be from the roof or, perhaps, trestles and planks. Every job is different so assess each on its merits and always comply with Workplace Health and Safety Standards within your area.

## TOOLS REQUIRED


- Gloves
- Cordless Drill
- 1/4" Magnetic Tech Screw Bit
- L/H & R/H Tin Snips (Red & Green Handles, known as "Aviation Snips")
- 300g Silicone tube hand dispenser (Caulking Gun)



**Installation Disclaimer:** This guide is supplied for information purposes only.  
Technical support available on (07) 5390 4077.

## CLEAN CLOGGED GUTTERS


Scrub and rinse dirty gutters.

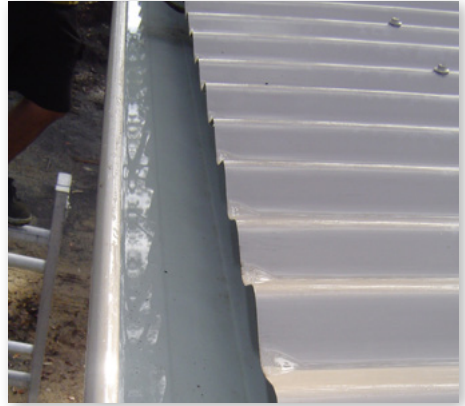

**NOTE:** When down pipes are connected to the water storage tanks, it is important to divert this dirty rinse water away to avoid contaminating the tank water.


## LOCATE TRIMY PROFILE

Locate Trimy profile on the roof & set gutter edge just back from the gutter lip.

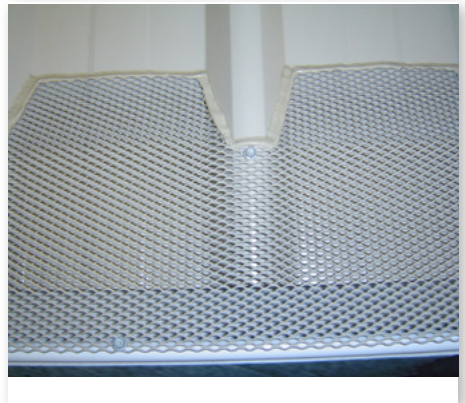

## SCREW A 2ND ROW MESH HOLE

While holding mesh in location, screw through a 2nd row mesh hole into the gutter lip.

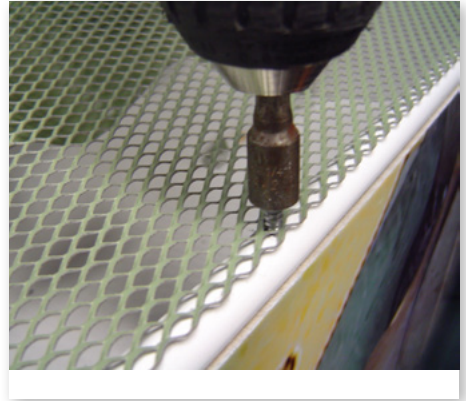

**NOTE:** Make sure never to over tighten any of the screws. The product only requires positive pressure to secure it in place.

## SCREW TO THE ROOF | SET & TRIM

Over lap the ends of each strip & screw to the roof.



Set & trim gutter end & screw into place.



## CUT & BREAK MESH TO SUIT

Cut & break mesh to suit corner profile. Screw & seal.




Cut in corner to suit.



## CLEAN DEBRIS, OVERLAP & SCREW IN PLACE

Make sure edges of the valley are clean of debris. Lay lengths of profiled valley product next to the valley & overlap by 15mm & screw. Insert longer leg side of the product under the valley edge. Squeezing the product, now clip the opposite side into the valley. Silicone seal edge.

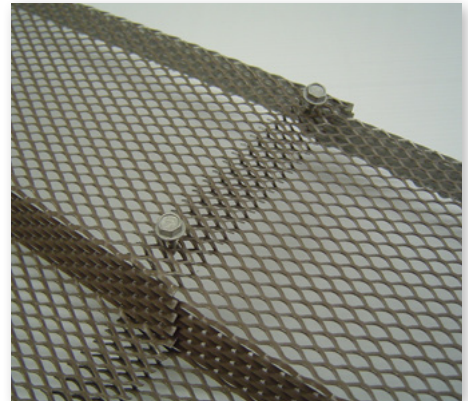


## CUT & SEAL

Cut & seal.




Alternate, over the top method. Cut & seal.

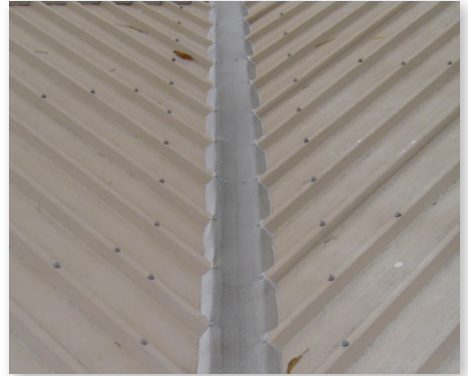

## BOND PRODUCT & ROOF TOGETHER

Bond product & roof together, similar to welding. Be cautious not to use too much silicone. (See Tips Section)

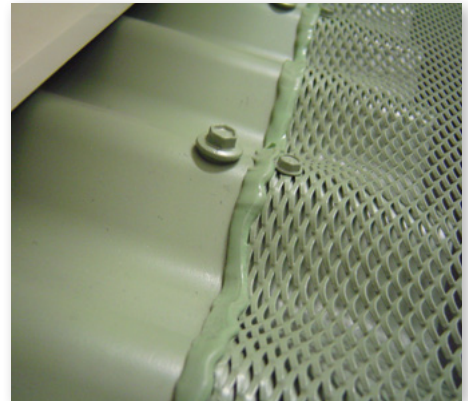


## INSTALLED PRODUCT

A completed Trimy install.



## TRIMY TAB TIP


It is necessary to prebend the Trimy tabs prior to installation. Make sure you do not over bend. Allow slight contact pressure in the water course once you have screwed off. This makes for a better silicone seal.

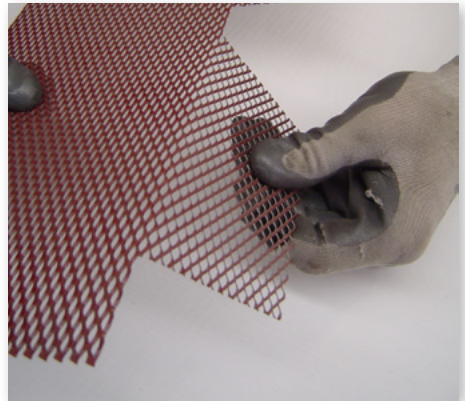

**NOTE:** It may be necessary to hand bend the product to aid in the installation if the gutter lip is lower in reference to the roof line. (See Tips Section)

## TIPS

Hand bending.

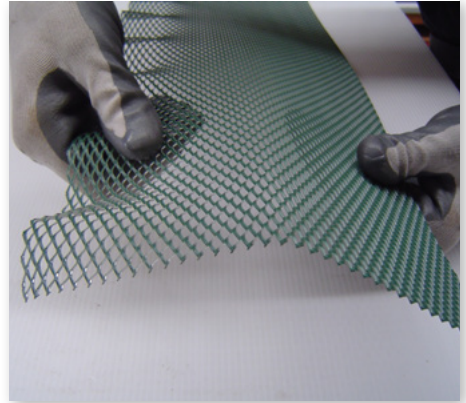

### **Silicone Application**

Cut the end of the tip at a slight angle which flat-tens the Silicone as you seal. Always push the Silicone as this ensures a seal between roof & product.



**NOTE:** Always clean up after you have completed the installation. Off-cuts are sharp & could cause injury.





QLD EXPANDED METALS COMPANY

**(07) 5390 4077**

**E** [admin@qemco.com.au](mailto:admin@qemco.com.au)

**P** PO Box 5448 | Maroochydore BC | Q | 4558

**[qemco.com.au](http://qemco.com.au)**

ABN: 38 153 028 365

© Copyright 2019 QLD Expanded Metals Pty Ltd