

TRIMDEK / SPANDEK / KLIP-LOK®

TRIMDEK / SPANDEK / KLIP-LOK / INSTALLATION GUIDE



QLD EXPANDED METALS COMPANY

WORKPLACE HEALTH & SAFETY

At all times and on all sites, Health & Safety must be the first priority.

Installation may be from the roof or, perhaps, trestles and planks. Every job is different so assess each on its merits and always comply with Workplace Health and Safety Standards within your area.

TOOLS REQUIRED

- Gloves
- Cordless Drill
- 1/4" Magnetic Tech Screw Bit
- L/H & R/H Tin Snips (Red & Green Handles, known as "Aviation Snips")
- 300g Silicone tube hand dispenser (Caulking Gun)



Installation Disclaimer: This guide is supplied for information purposes only.
Technical support available on (07) 5341 8036.

Please follow our installation guidelines when installing Qemco products.
Failing to follow the installation guidelines may void the warranty on the product.

CLEAN CLOGGED GUTTERS

Scrub and rinse dirty gutters.



NOTE: When down pipes are connected to the water storage tanks, it is important to divert this dirty rinse water away to avoid contaminating the tank water.

LOCATE PROFILE

Locate profile on the roof & set gutter edge just back from the gutter lip.




SCREW A 2ND ROW MESH HOLE

While holding mesh in location, screw through a 2nd row mesh hole into the gutter lip.

NOTE: Make sure never to over tighten any of the screws. The product only requires positive pressure to secure it in place.

Class 4 Self drilling Fasteners are required as a 'minimum' under the Australian Standard for the building & construction industry.

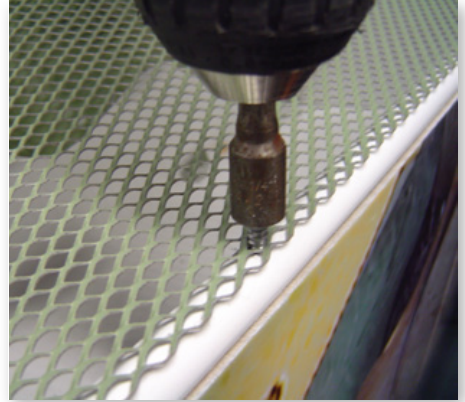

SCREW TO THE ROOF | SET & TRIM

Over lap the ends of each strip & screw to the roof.



Set & trim gutter end & screw into place. Seal trimdek tab edges to roof throughout.



CUT & BREAK MESH TO SUIT


Cut & break mesh to suit corner profile. Screw & seal.

Cut in corner to suit.




CLEAN DEBRIS, OVERLAP & SCREW IN PLACE

Make sure edges of the valley are clean of debris. Lay lengths of profiled valley product next to the valley & overlap by 15mm & screw. Insert longer leg side of the product under the valley edge. Squeezing the product, now clip the opposite side into the valley. Silicone seal edge.

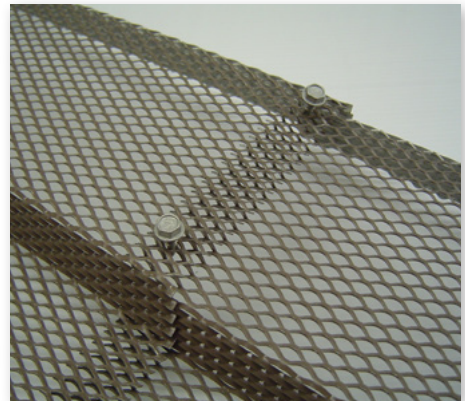


BOND PRODUCT & ROOF TOGETHER

QEMCO gutter guards can be installed without using silicone, but some installers choose to use it for added protection and sealing. While silicone is not required for the installation, it can provide an extra layer of security against leaves, pests, or debris. The pre-profiled gutter guard system itself is designed to create a tight seal, but silicone can enhance that seal especially in leafy areas or stretching of roof sheets.

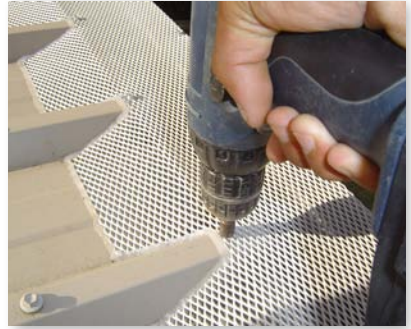


INSTALLED PRODUCT

A completed Trimy install.

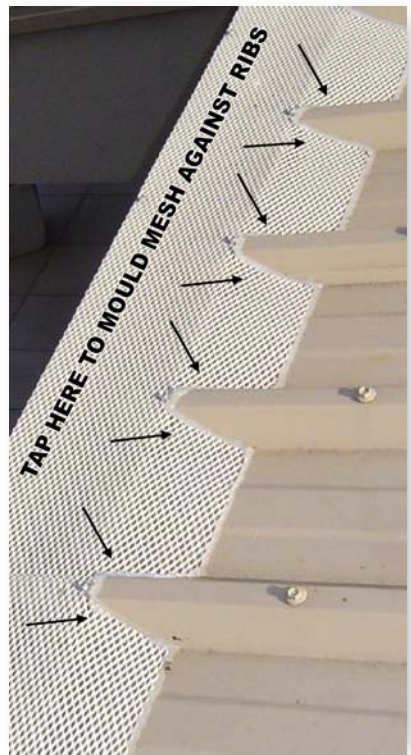

TAB BENDING

It is necessary to prebend the tabs prior to installation. Make sure you do not over bend. Allow slight contact pressure in the water course once you have screwed off.

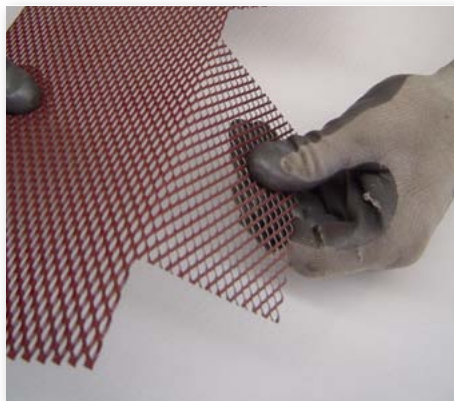

NOTE: It may be necessary to hand bend the product to aid in the installation if the gutter lip is lower in reference to the roof line. (See Tips Section)


TIPS

Hand bending.

NOTE: Always clean up after you have completed the installation. Off-cuts are sharp & could cause injury.

IMPORTANT: Swarf Staining.

Swarf particles, if left on the surface, will corrode and cause rust stains which will detract from the finished appearance of the product. The roof should be blown, vacuumed, swept or rinsed progressively to remove loose particles.

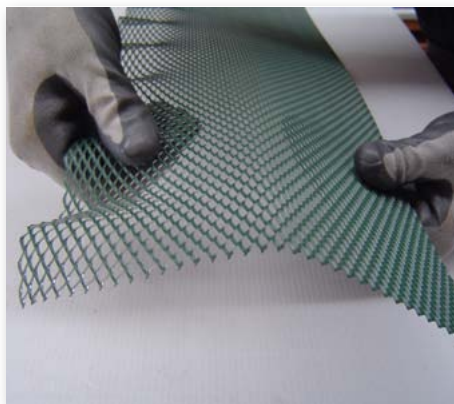



gemco.com.au

[E admin@gemco.com.au](mailto:admin@gemco.com.au)

[PO](#) PO Box 5010, Baringa QLD 4551

ABN: 42678 107 250

©Copyright Queensland Expanded Metals Company Pty Ltd

gemco.com.au